



The healthy paint.



Colour Guide

Interior

Exterior Silicate

Weather Protection

Foreverbreathe™

Foreverbreathe™ Interior Paint

Foreverbreathe™ Interior Paint is solvent-free, breathable and suitable for use on walls and ceilings. It has excellent hiding power and spreading rate, as well as being washable. Highly versatile, Foreverbreathe™ Interior Paint can be applied to all interior mineral and chemically neutral surfaces such as Magnum Board®, embossed wallpapers or textiles. Foreverbreathe™ Interior Paint has a matt finish and can be mixed to an extensive range of colours.



Foreverbreathe™ Exterior Silicate Paint

Foreverbreathe™ Exterior Silicate Paint is solvent-free, breathable and suitable for use on solid unpainted mineral surfaces such as plaster, lime masonry, cleaned concrete, Magnum Board®, and surfaces already treated with silicate and mineral paint coatings. As Foreverbreathe™ Exterior Silicate Paint binds with the substrate and is water repellent (hydrophobic), it is weather resistant and protects against excessive water absorption. It has excellent hiding power and spreading rate. Foreverbreathe™ Exterior Silicate Paint can be mixed to an extensive range of colours.



Foreverbreathe™ Weather Protection Paint

Foreverbreathe™ Weather Protection Paint is solvent-free, breathable and suitable for use on hard and softwoods on exterior surfaces. Foreverbreathe™ Weather Protection Paints are extremely weather and water-resistant, and achieve very good UV-light protection. Made from plant-based chemistry and resins, it provides a lasting finish which does not fill the wood grain and has excellent hiding power. The paint has lasting flexibility, making it suitable for refurbishments. Foreverbreathe™ Weather Protection Paint has a silk gloss finish and can be mixed to an extensive range of colours.



Why choose

Foreverbreathe™ Paints

You can breathe easy when you choose Foreverbreathe™ Paints. Made from high quality, renewable resources, Foreverbreathe™ Paints are breathable and free of harmful chemicals. This can lead to increased air quality, less condensation, energy savings and a healthy home environment for you and your family.

Key benefits:


- Breathable, solvent free and containing low or no VOC
- Made from renewable resources
- External and internal applications
- High performance and durability
- Extensive colour range – match to nearly any other paint colour
- Excellent hiding power and spread rates
- Reduces condensation and provides energy savings when used within the Foreverbreathe™ Wall System

Exclusive to:




**Make your space,
a healthy place.**


www.healthbasedbuilding.com

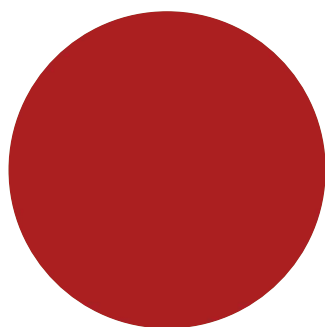


C4-75-30

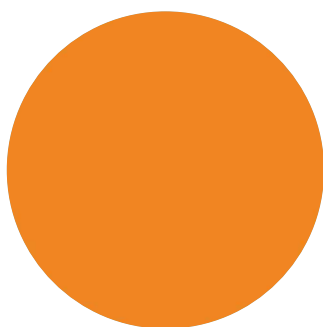


D6-58-58

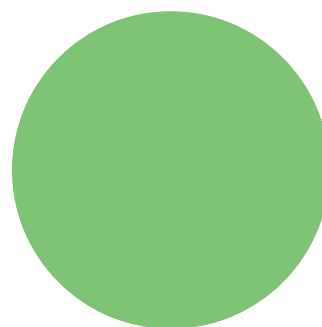


K7-48-56

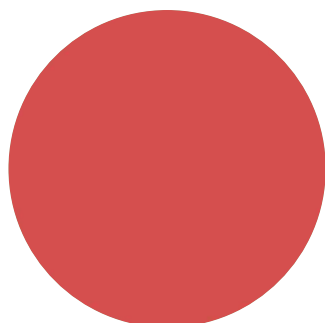


B6-40-50

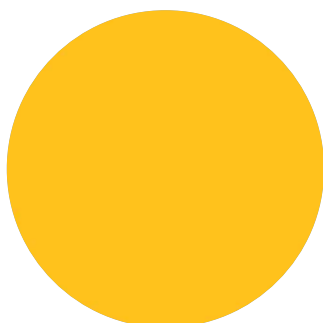


E8-55-70

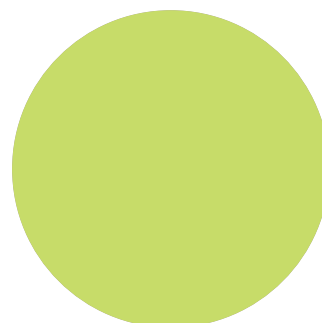


JO-48-70

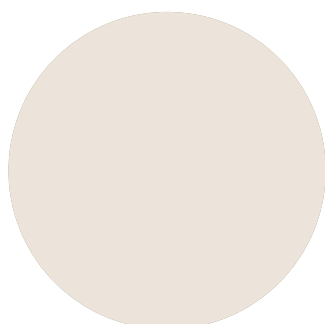


EO-03-84

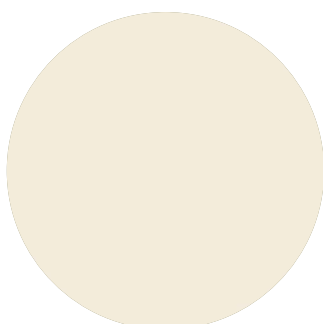


F2-05-87

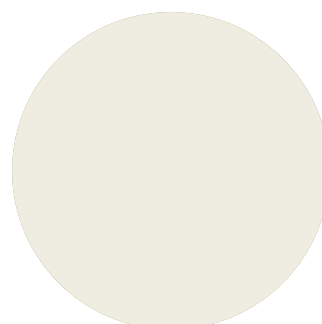


H2-07-87

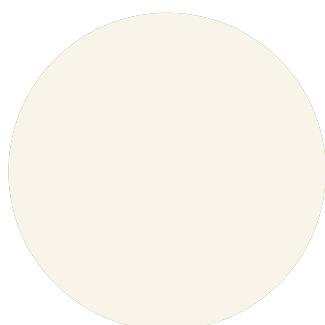

EN-02-88

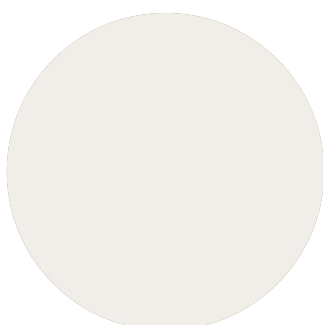


H2-04-88

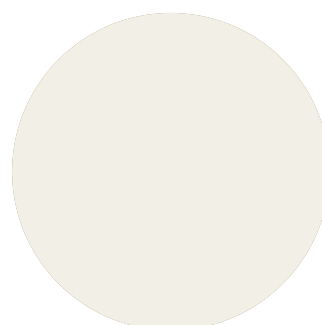


F6-03-87

Order yours at
healthbasedbuilding.com


Disclaimers: Colours shown are as close as possible to actual paint colours. Please note, due to limitations of the printing process, photographic and printed images may not represent the true colour. Always confirm your colour choice with Foreverbreathe™ test pots.

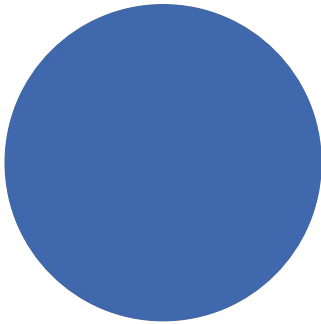


UO-40-40

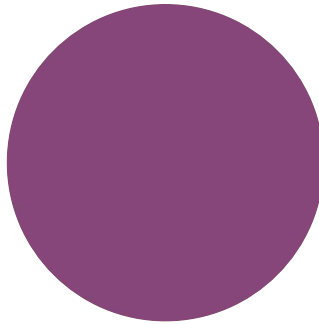


X9-24-33

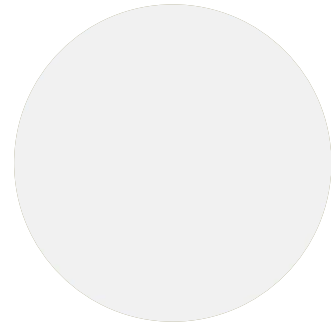


UN-02-85

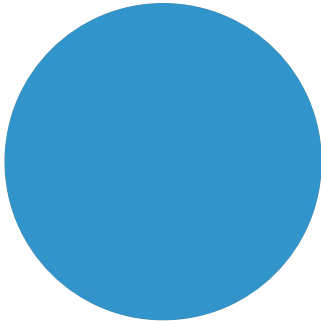


SO-50-50

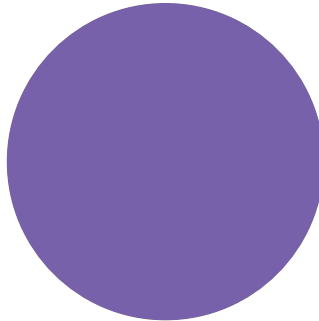


WO-30-40

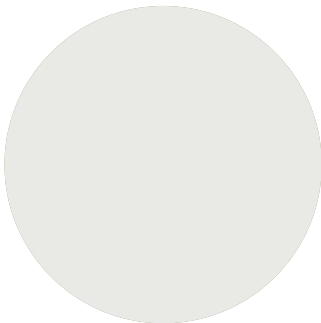


SN-02-85

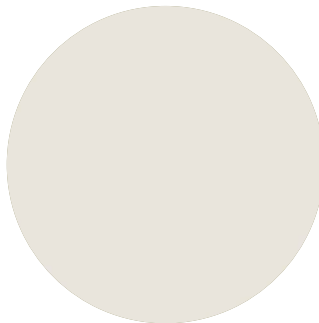

XN-01-84

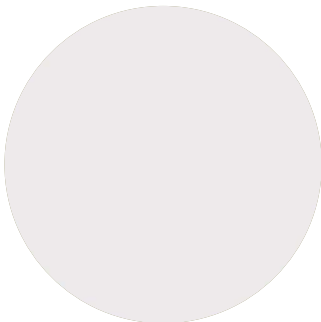


UN-02-85

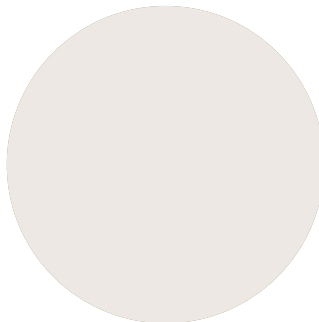


ZN-01-85

Order yours at
healthbasedbuilding.com


Disclaimers: Colours shown are as close as possible to actual paint colours. Please note, due to limitations of the printing process, photographic and printed images may not represent the true colour. Always confirm your colour choice with Foreverbreathe™ test pots.

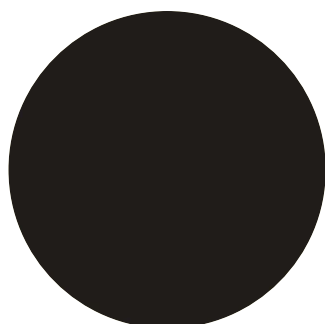


ON-00-10

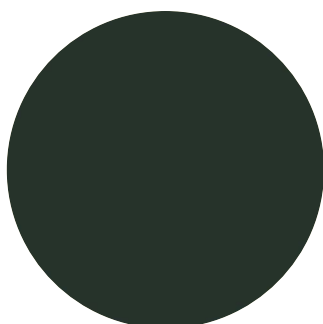


NO-10-20

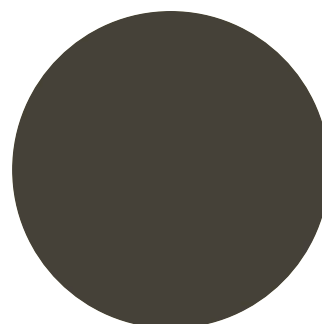


G2-04-26

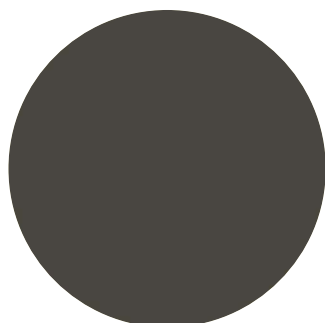


ON-00-31

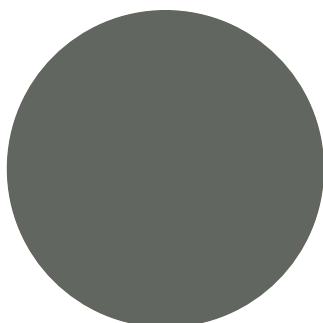


LN-02-37

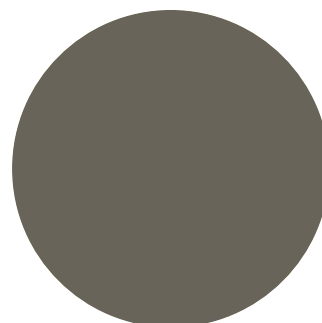


FN-02-37

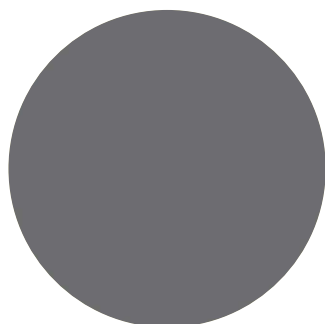


UO-05-35

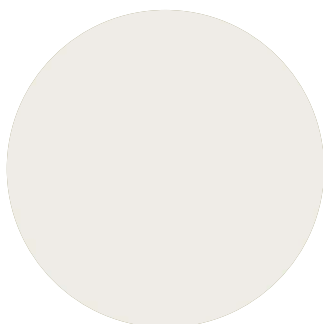


GN-01-88

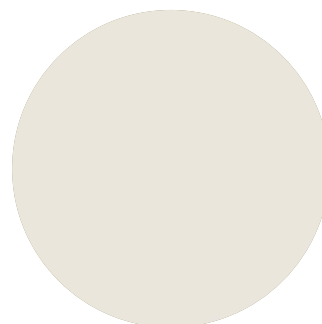


FN-02-88

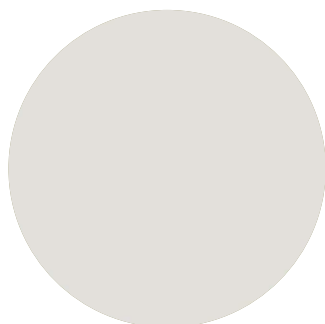


ON-00-83

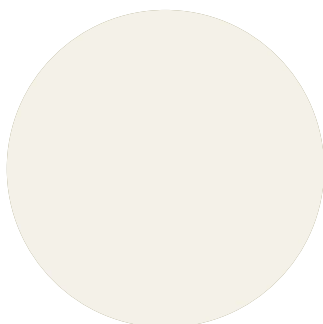


CN-02-88

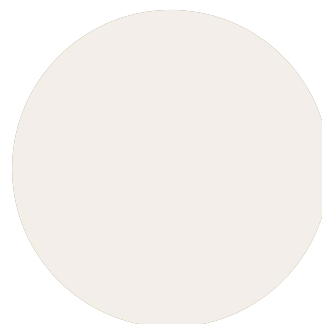


EN-02-87

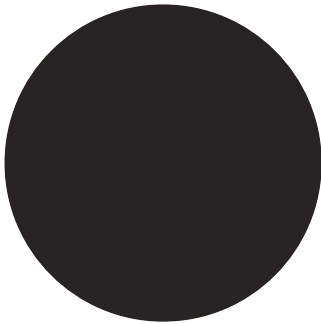


S5-03-16

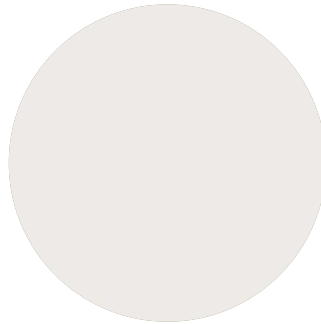


ON-00-90

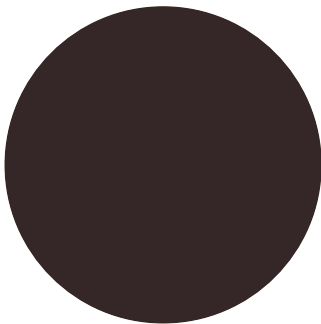


AO-05-15

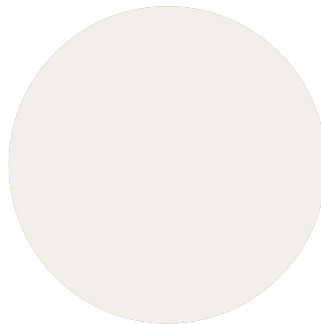


LN-00-87

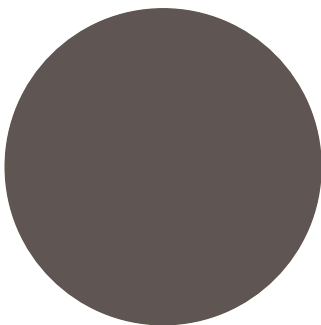


AN-02-35

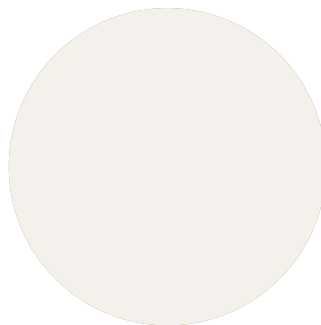


H2-03-90

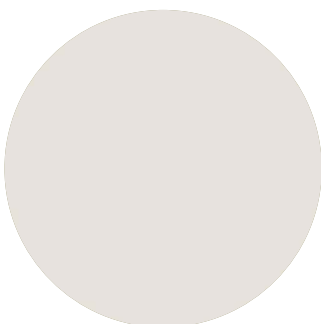


FN-02-85

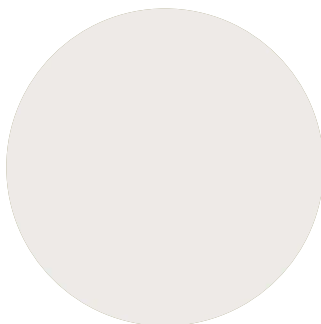


Interior White

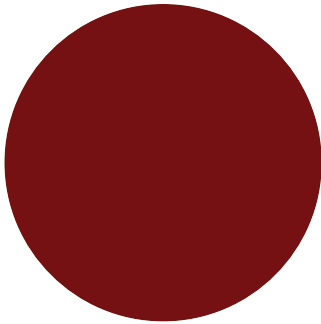


CO-48-20

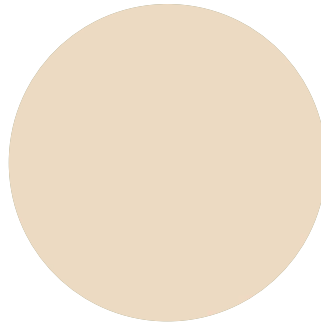


EO-10-80

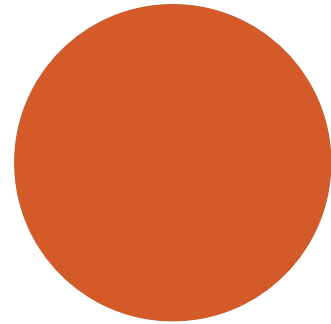


D3-65-43

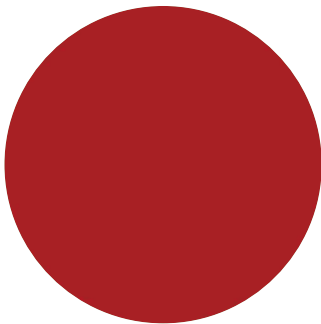


CO-60-30

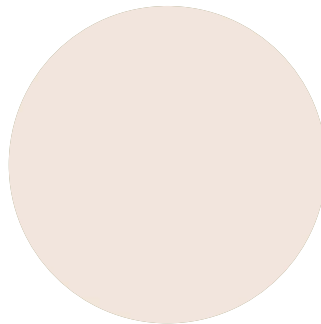


CO-03-86

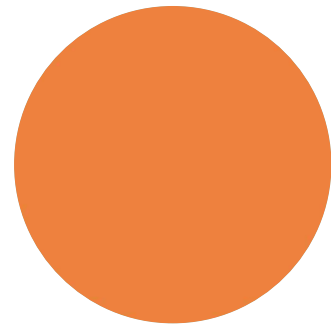


D2-50-55

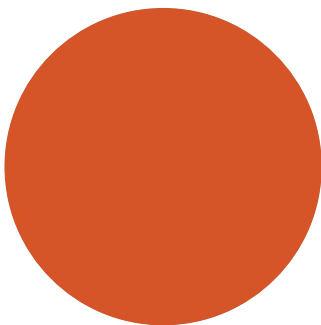


C6-49-48

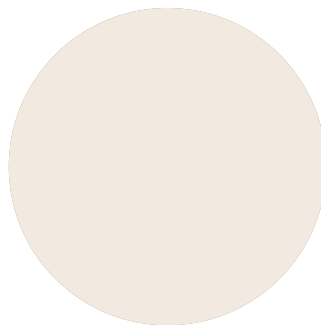


E4-05-85

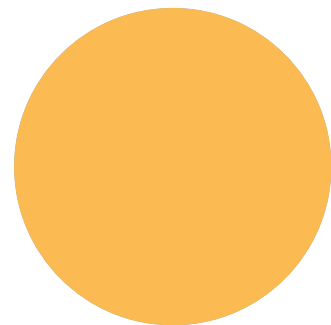


E4-40-70

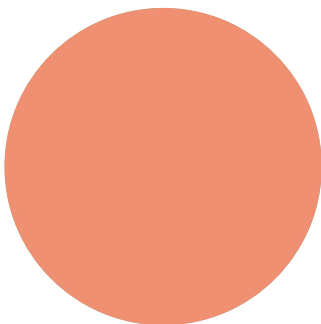


C4-30-60

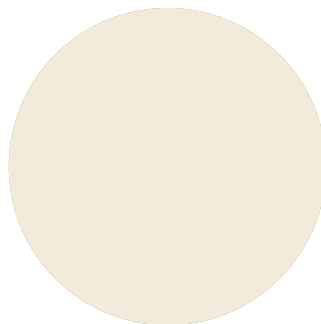


G4-08-88

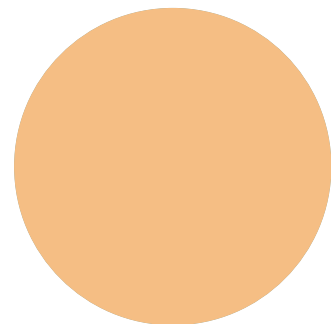


EO-25-75

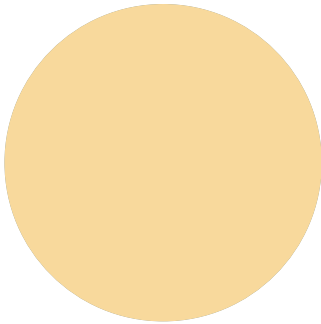


FO-24-80

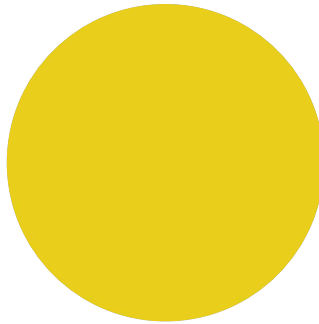


GO-60-70

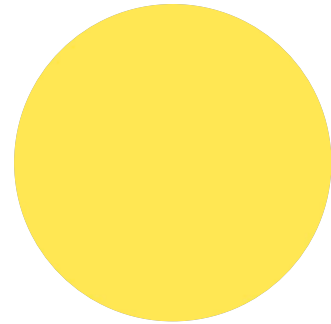


GO-50-80

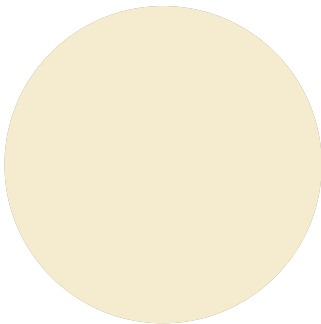


G4-13-85

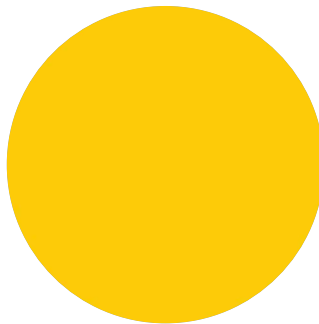


F2-55-75

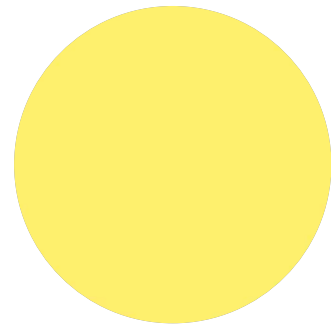


G3-46-83

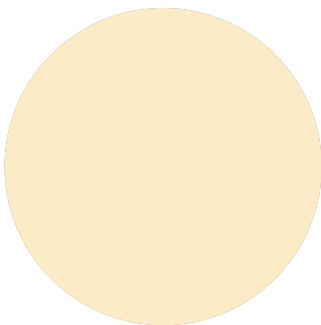


F2-15-85

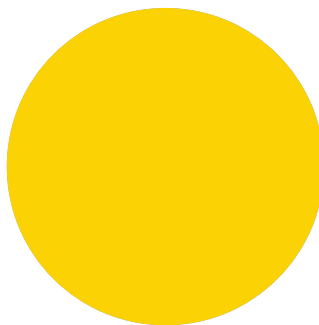


F6-70-70

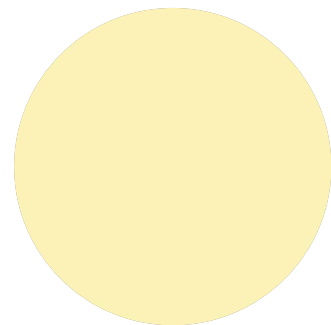


G5-24-85

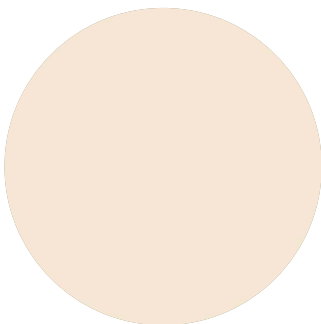


F2-08-86

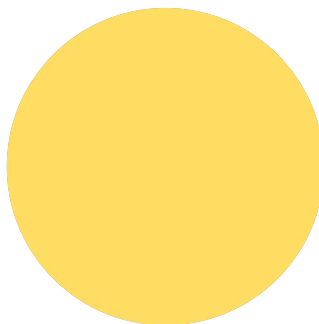


F6-40-80

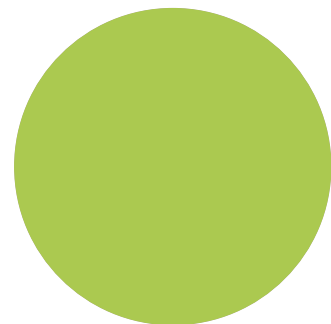


JO-40-60

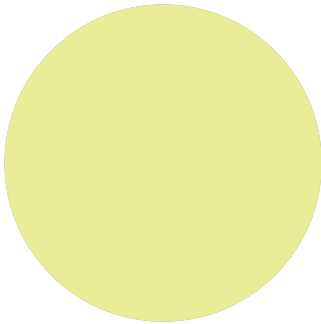


H2-30-80

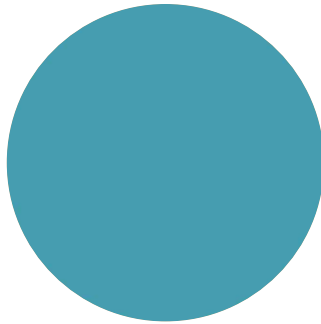


QO-40-50

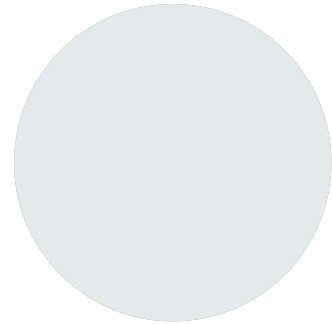


SO-05-85

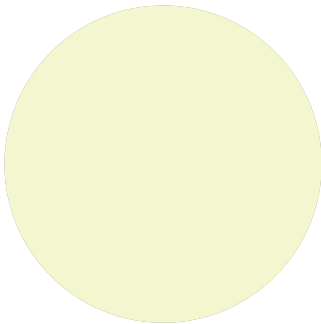


H2-15-85

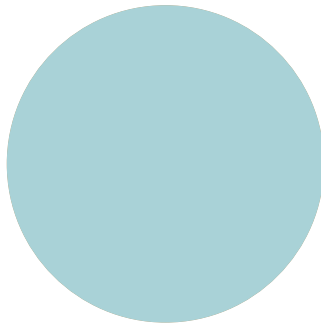


QO-20-70

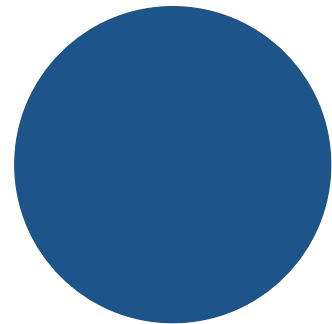


T4-36-27

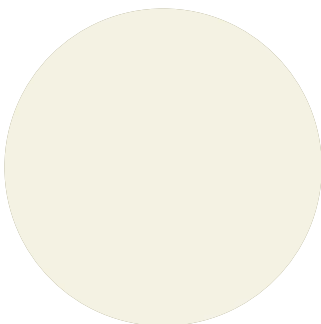


H2-08-90

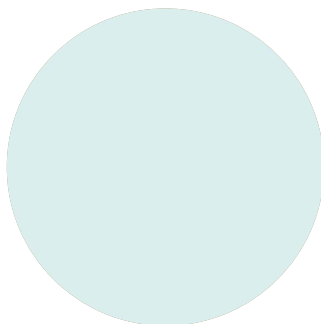


Q6-10-80

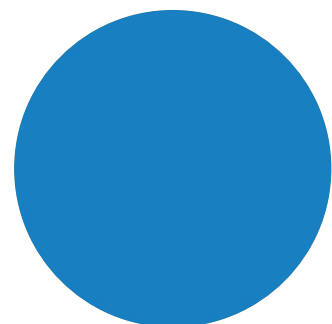


TO-50-40

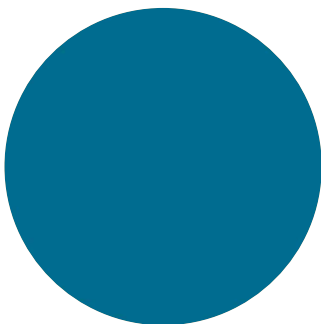


QO-50-30

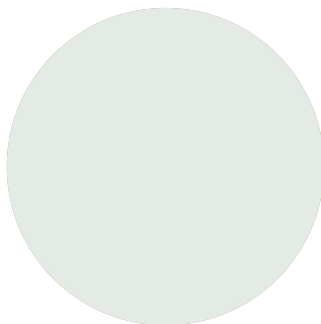


NO-05-85

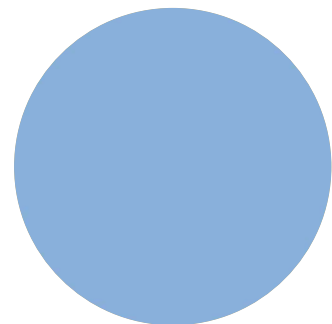


TO-30-60

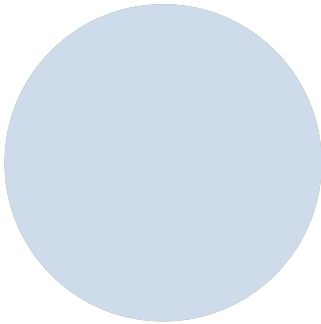


S6-14-75

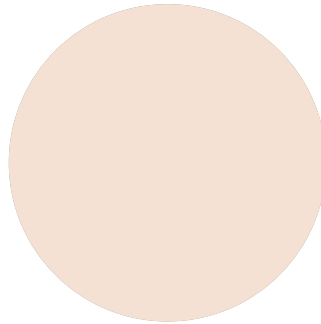


C8-07-82

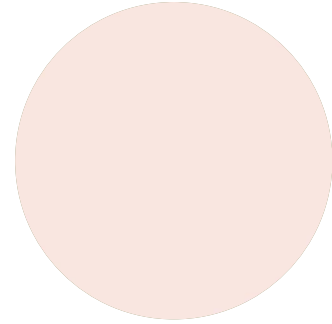


AO-05-85

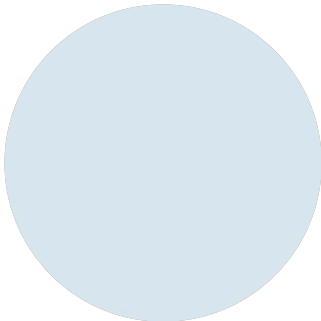


SO-10-80

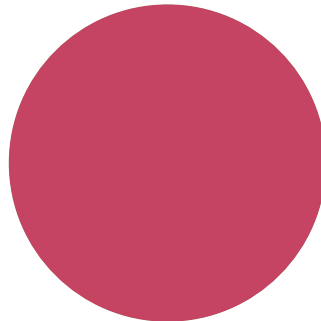


A6-35-40

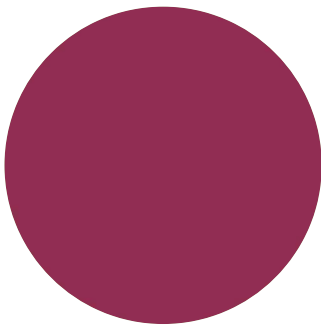


AO-30-30

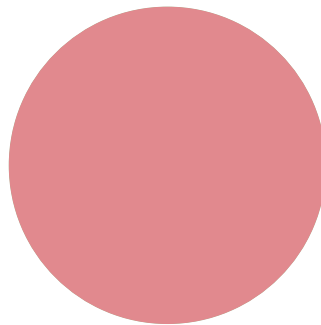


A8-20-60

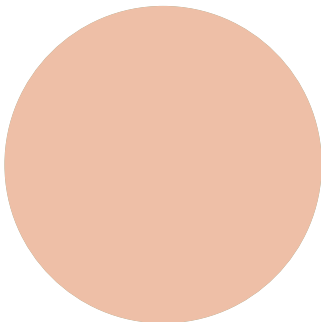


C8-15-75

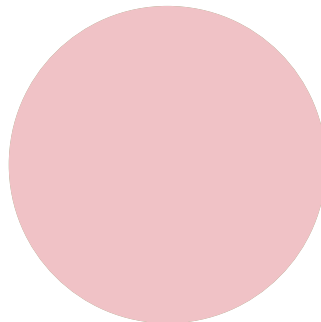


AO-10-75

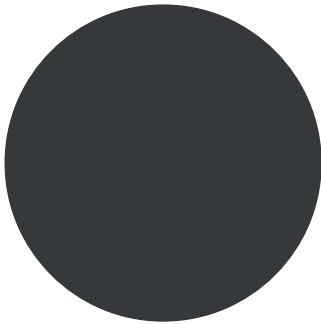


SO-06-21

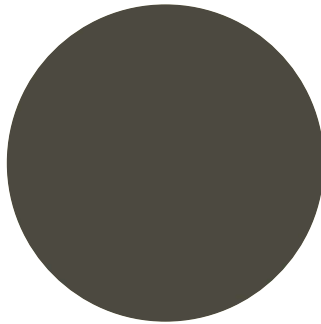


LN-02-27

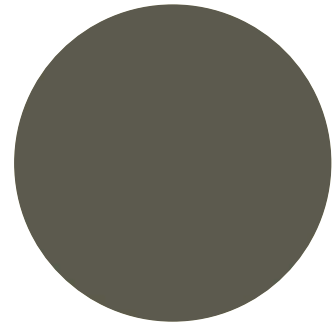


JO-05-35

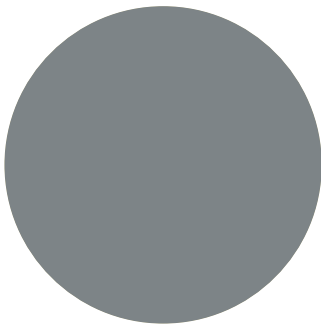


SO-05-45

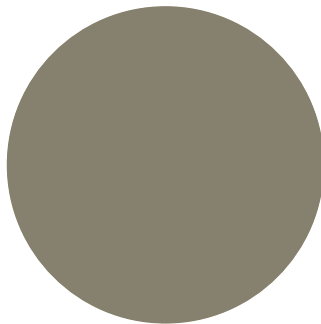


GO-05-45

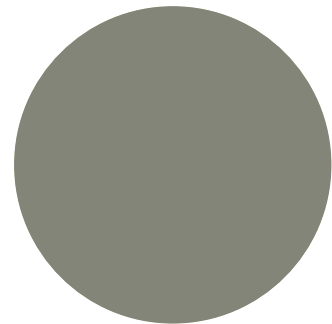


LN-02-47

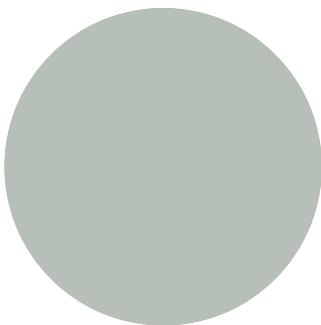


NO-05-65

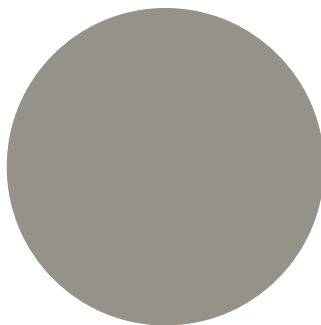


ON-00-50

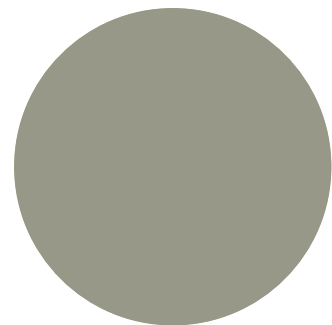


JO-05-55

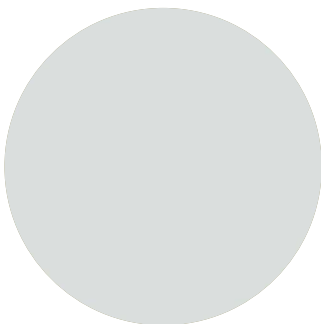


SN-02-77

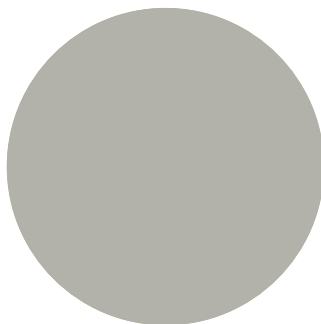


ON-00-64

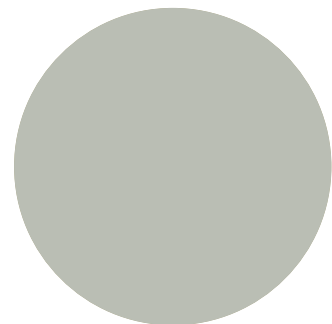


LN-02-67

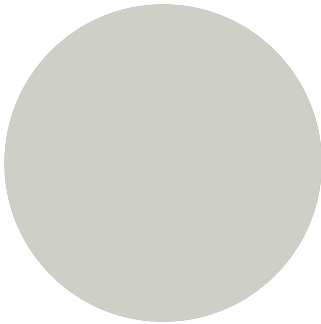


KN-01-74

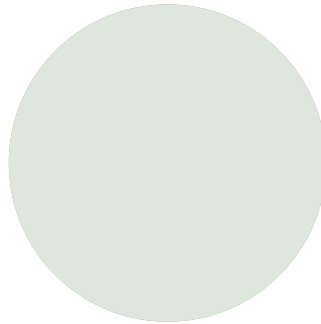


PN-02-82

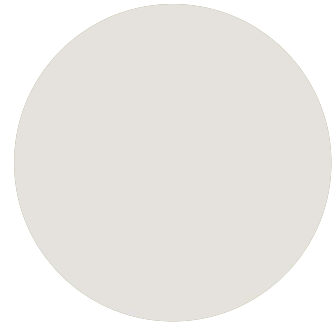


ON-00-81

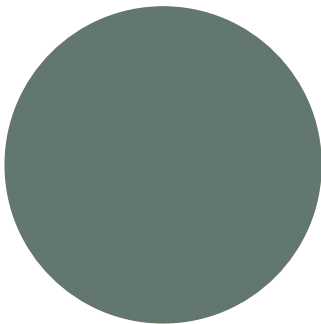


PO-10-40

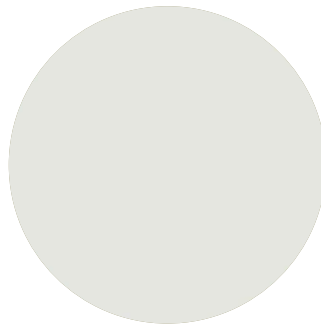


NN-01-84

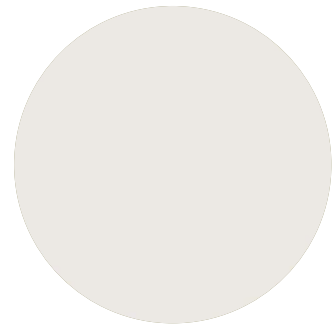


ON-00-86

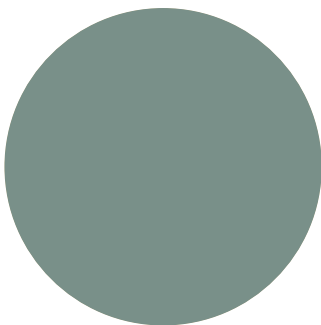


PO-10-50

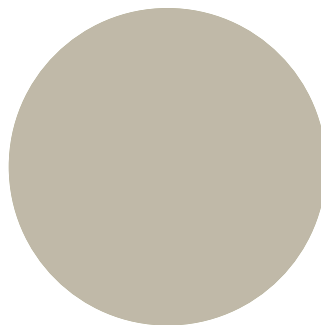


GO-05-65

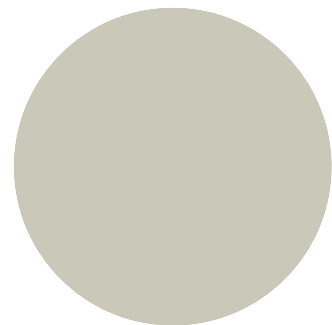


H3-04-72

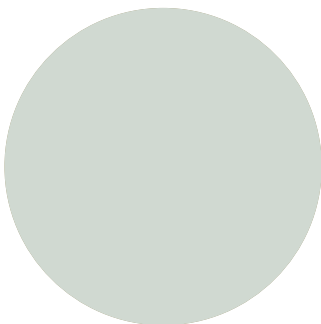


PN-02-77

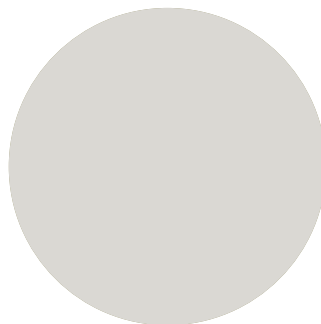


ON-00-76

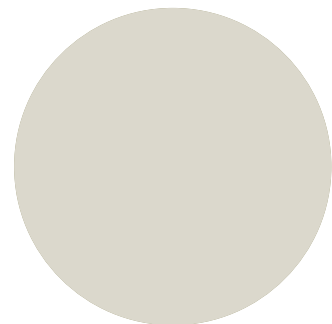


G8-03-79

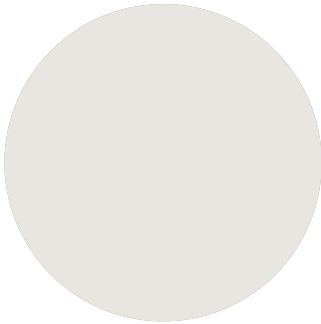


HN-02-85

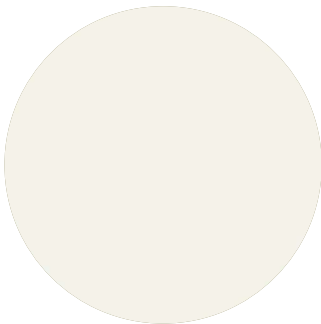


HN-02-88

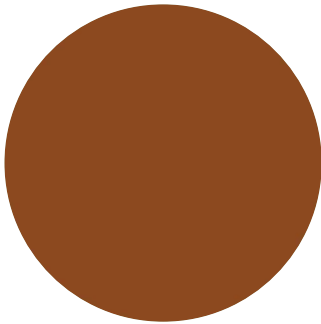


D2-40-30

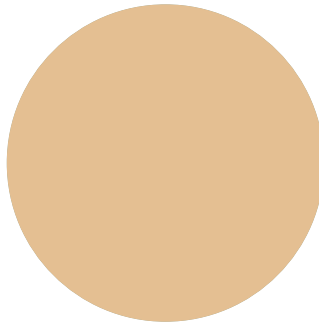


E4-20-70

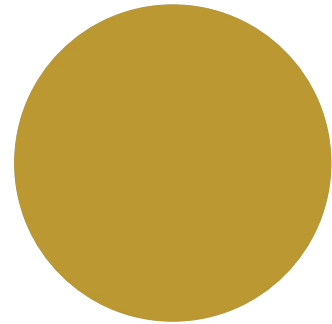


F2-40-50

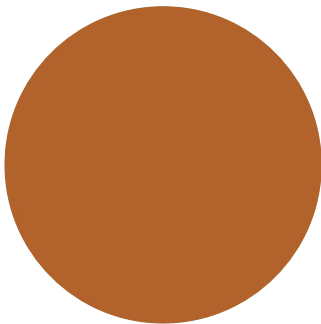


D2-40-40

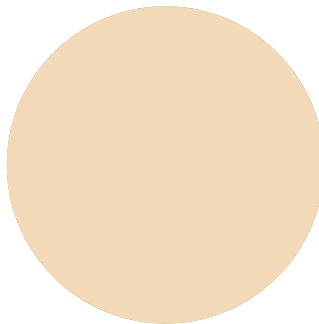


E8-15-80

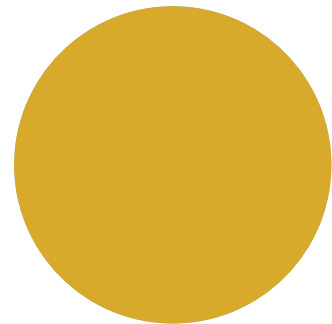


F2-50-60

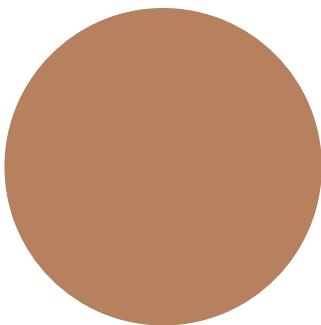


D2-20-50

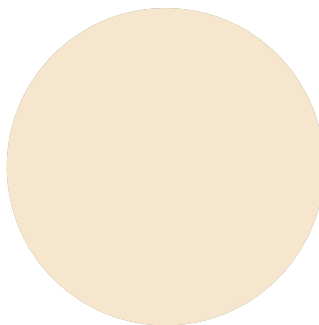


E8-10-85

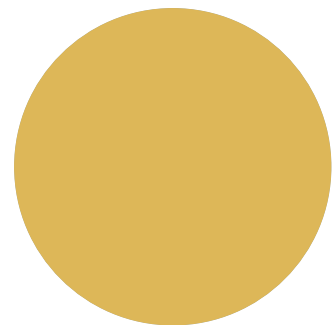


F2-35-65

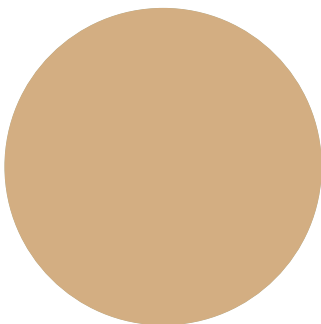


E4-20-60

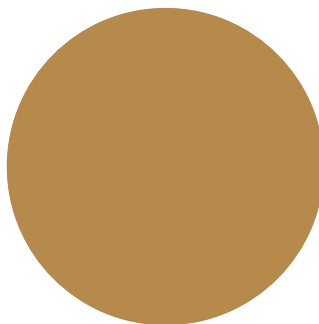


E4-30-50

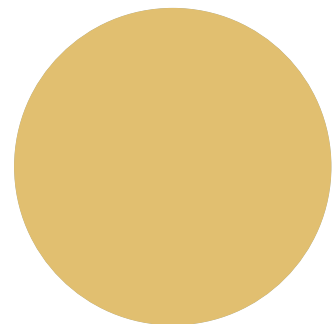


F2-30-70

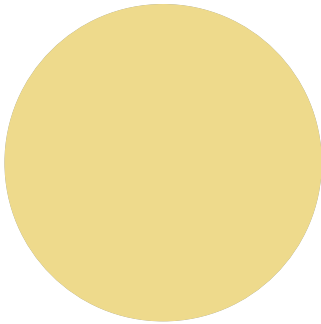


GO-25-75

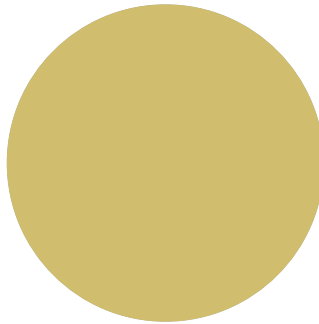


GO-25-65

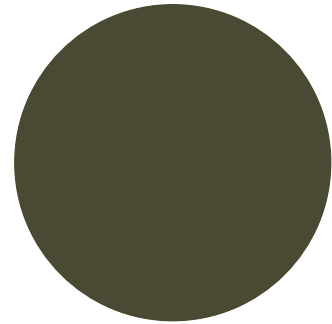


JO-15-25

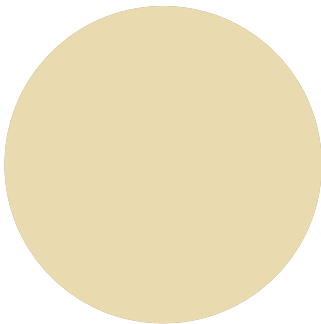


F6-15-80

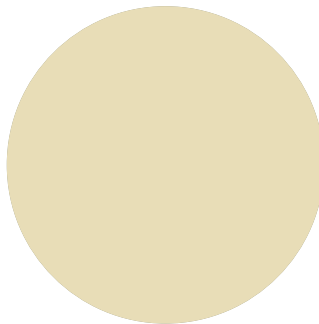


G1-13-79

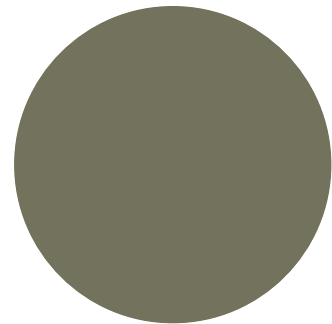


JO-10-40

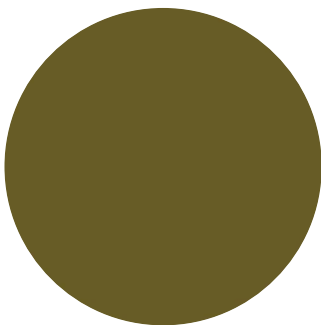


GO-30-30

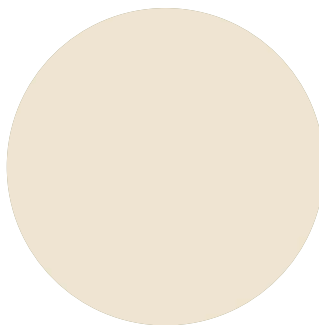


F6-07-82

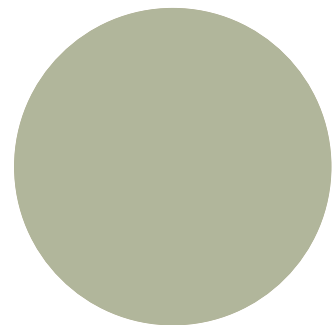


JO-10-60

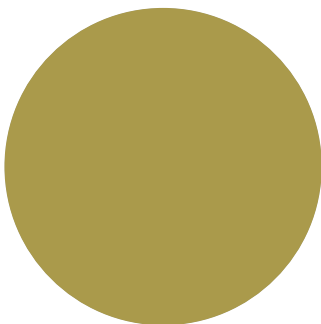


GO-30-50

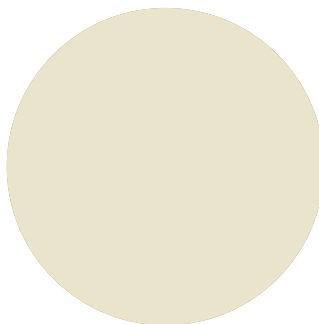


G4-08-83

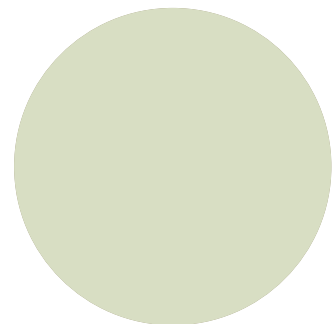


JO-07-77

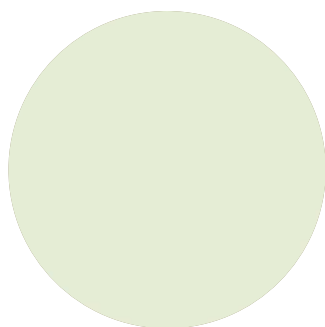


JO-07-82

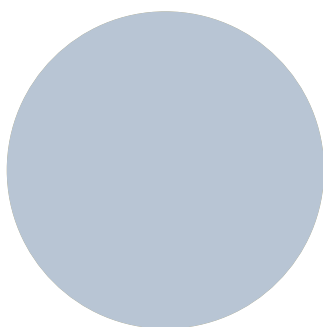


TO-10-70

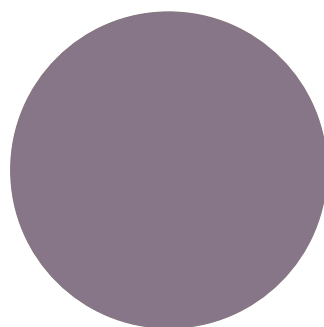


W7-07-44

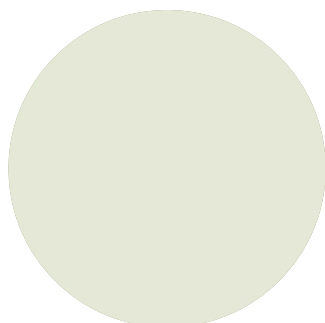


JO-05-85

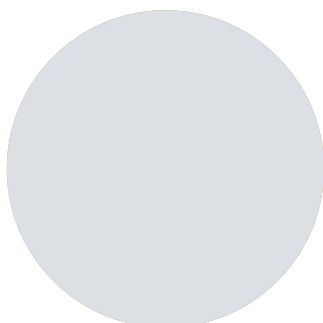


T3-06-80

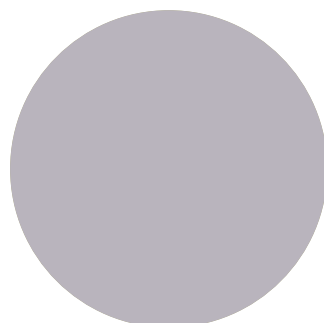


WO-05-65

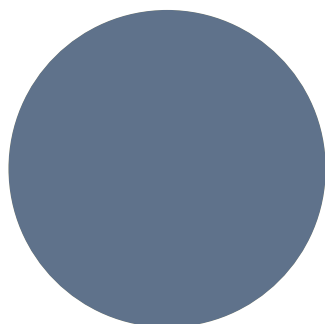


TO-20-40

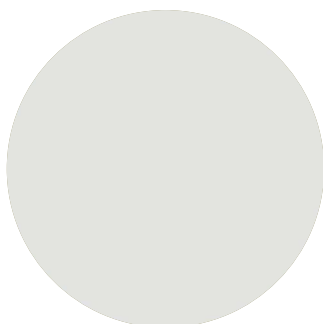


TN-02-82

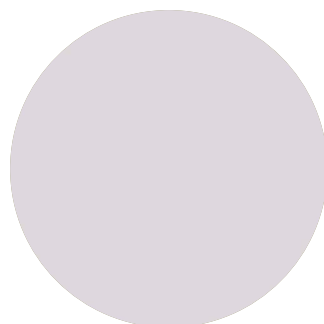


WO-04-78

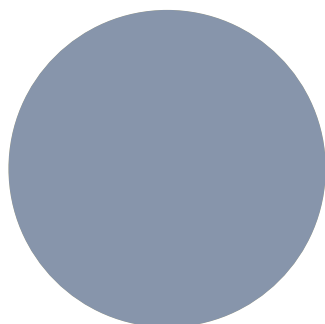


T3-14-55

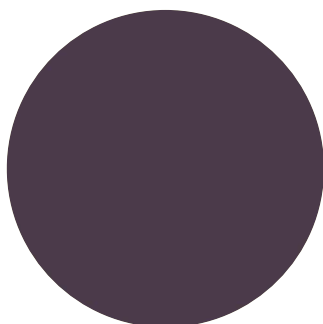


W7-08-24

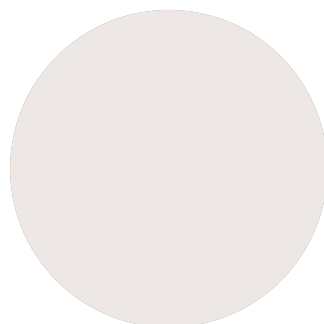


WO-03-84

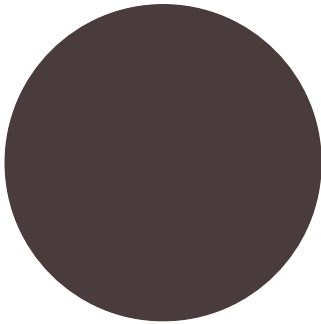


AO-05-25

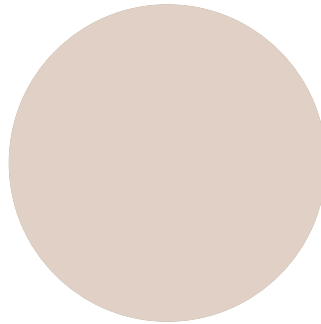


CO-05-75

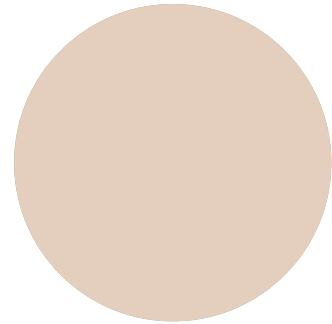


D6-07-77

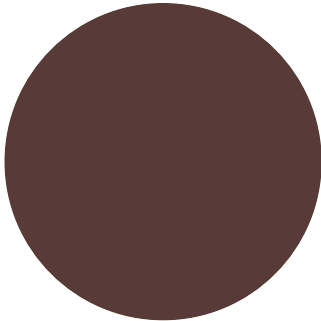


B2-10-25

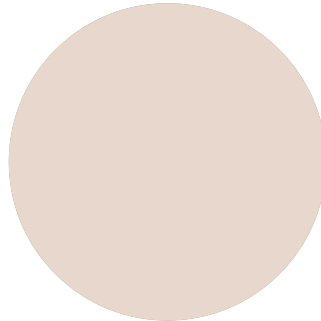


CO-04-78

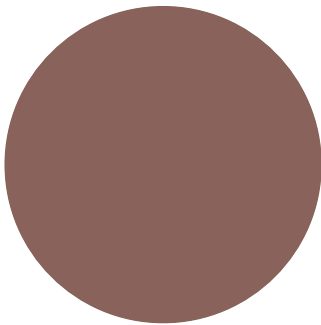


B2-10-40

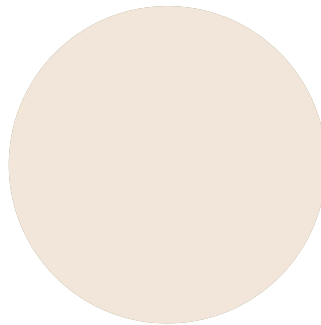


D6-05-85

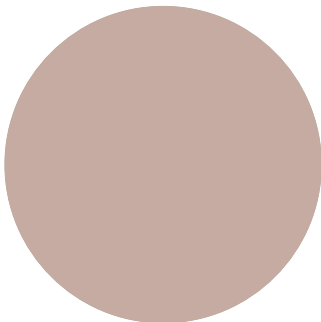


CO-05-65

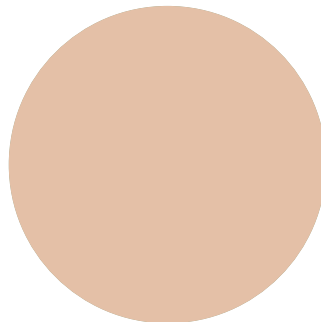


D2-10-70

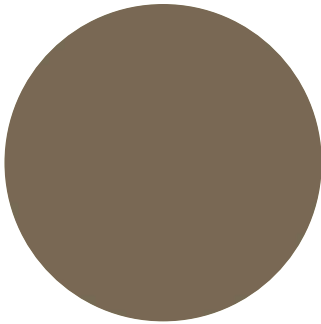


F2-10-40

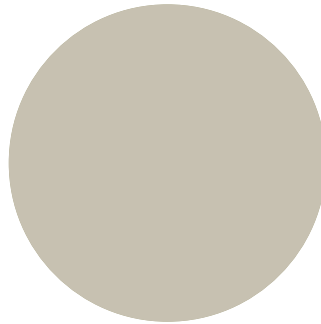


GO-05-70

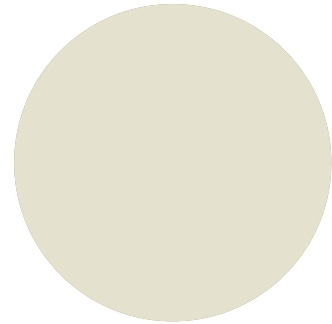


G4-05-81

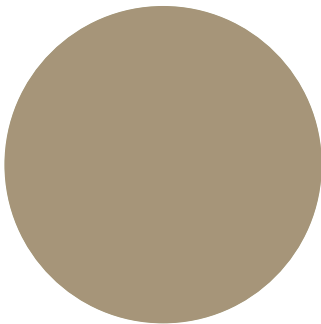


F2-10-50

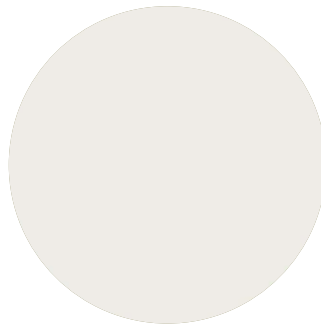


GN-00-88

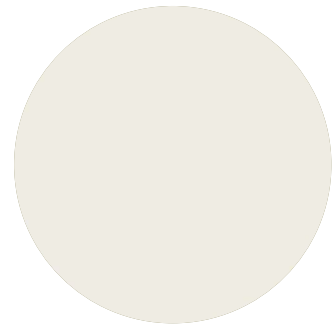


EN-02-90

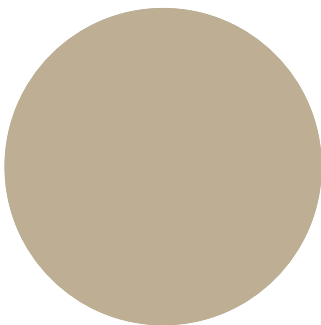


F2-10-60

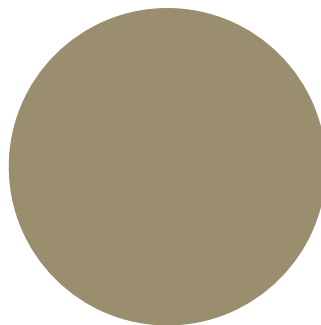


GO-10-50

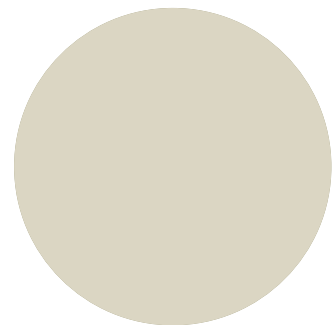


G4-05-77

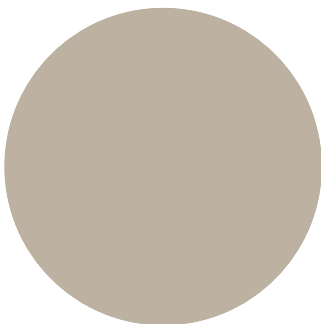


E4-05-65

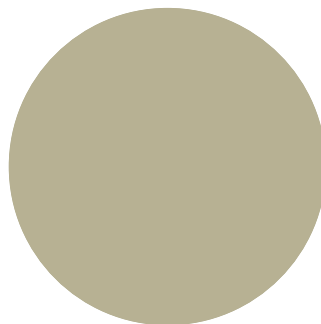


G4-10-60

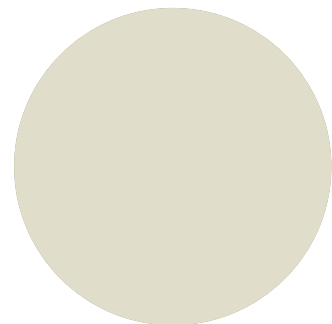


GO-05-80

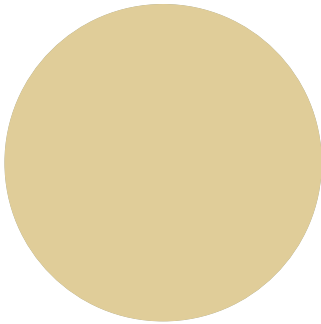


F6-18-74

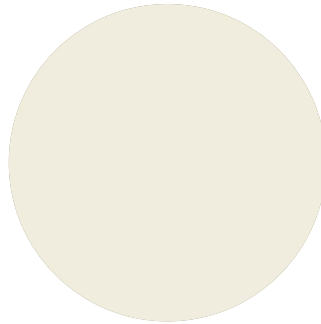


GN-02-90

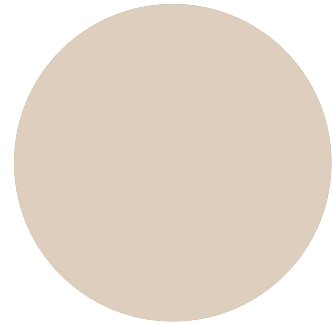


E5-05-77

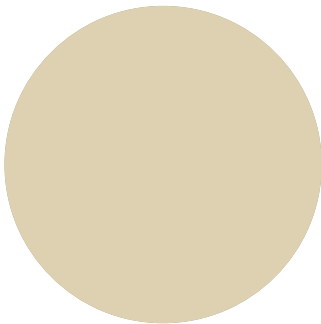


GO-10-75

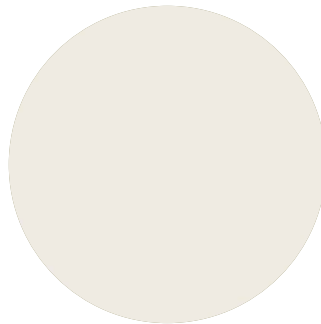


F2-03-84

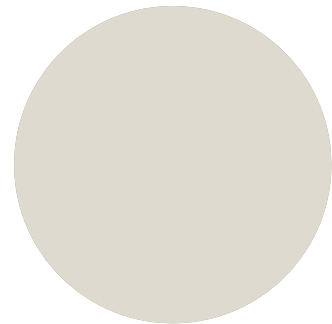


FN-02-77

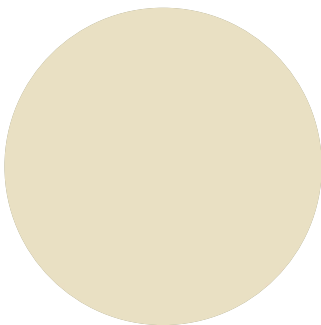


GO-10-80

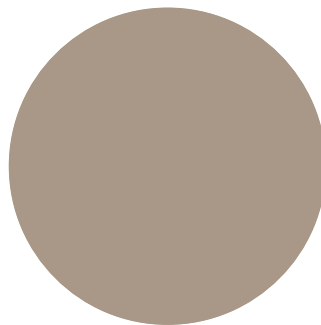


D6-05-55

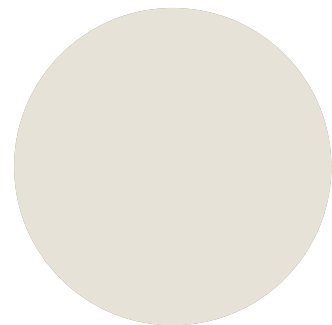


FN-02-82

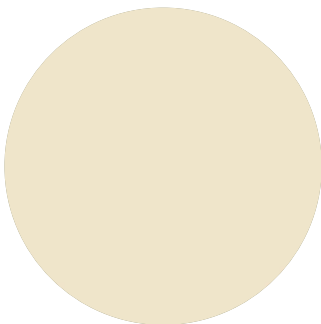


GO-08-84

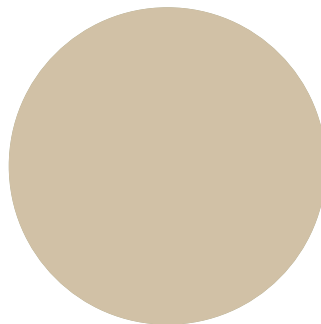


F2-10-70

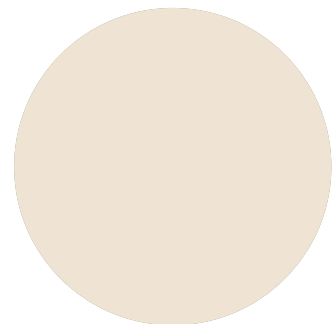


F2-06-84

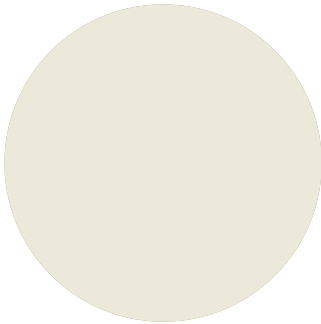


GO-03-86

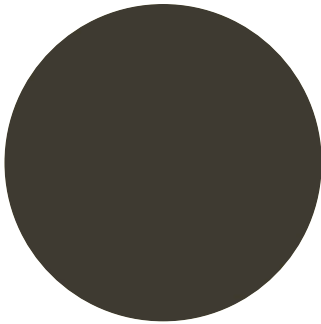


E3-06-25-ext

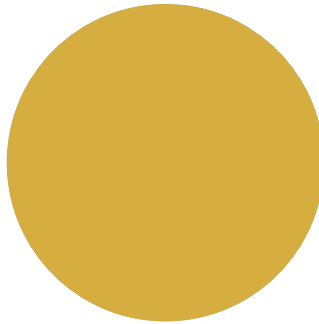


F2-40-60-ext

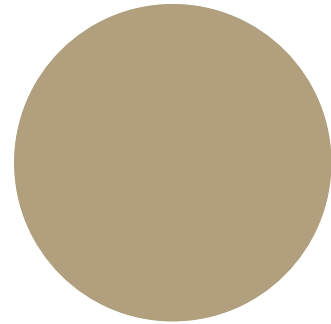


E3-09-65-ext

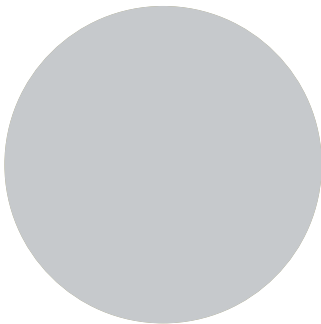


T5-03-76-ext

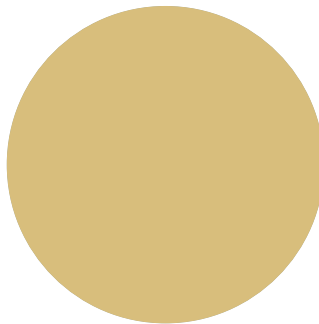


F6-18-74-ext

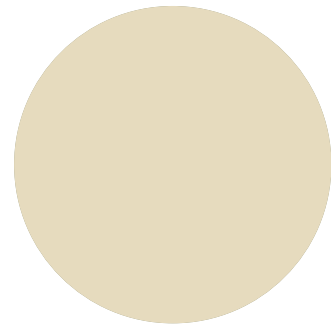


F8-07-83-ext

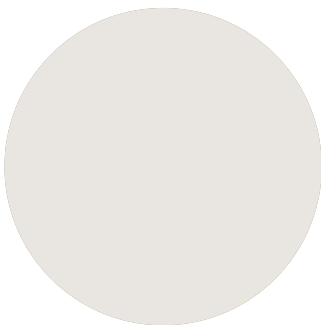


HO-01-86-ext

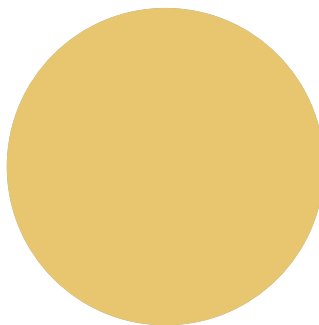


F3-24-75-ext

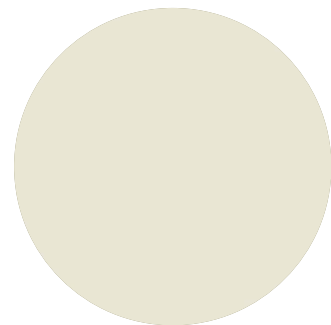


F9-04-83-ext

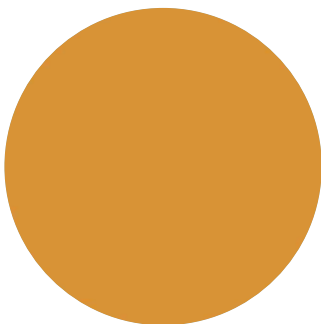


E2-43-57-ext

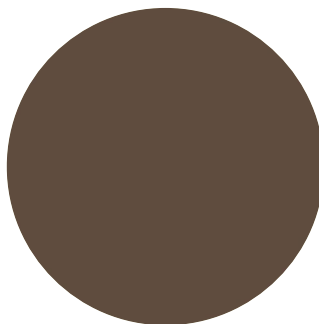


D2-10-30-ext

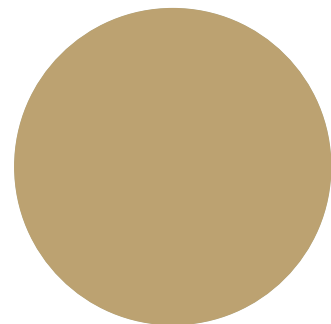


F2-14-66-ext

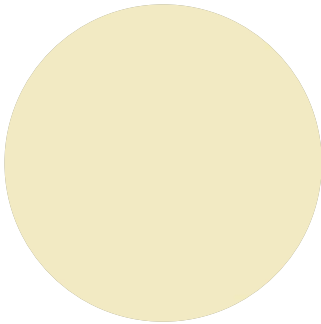


G4-13-85-ext

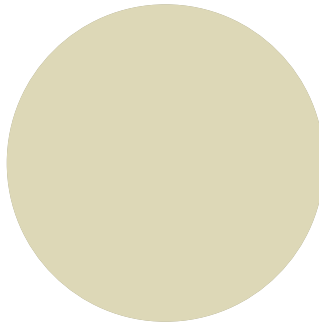


HO-09-80-ext

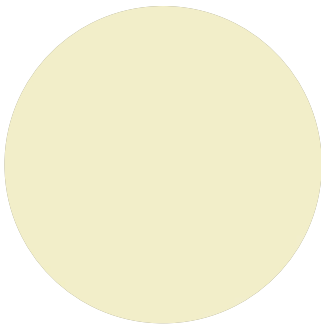


H1-11-86-ext

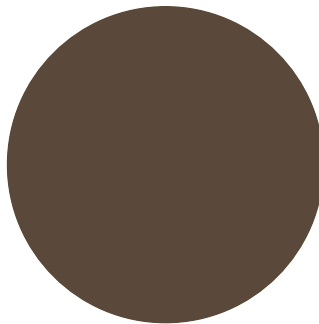


D6-10-30-ext

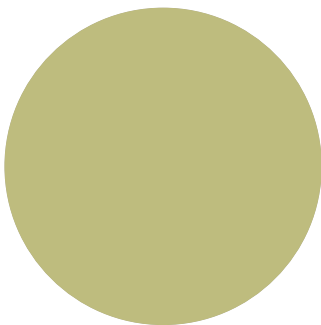


H1-20-70-ext

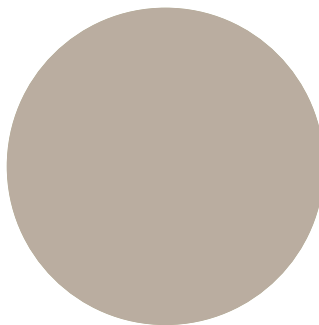


EN-02-71-ext

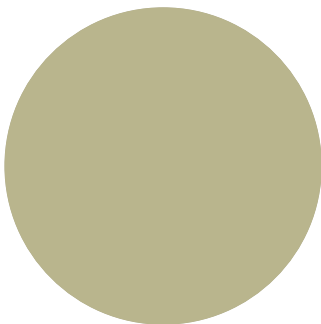


H1-11-70-ext

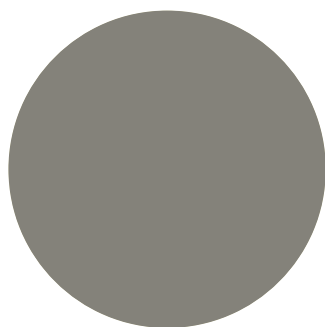


E3-06-25-WP

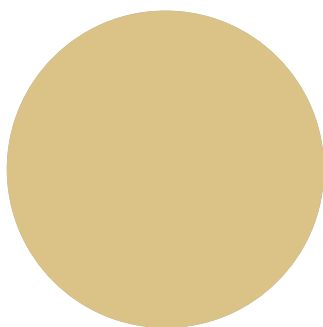


F6-18-74-WP

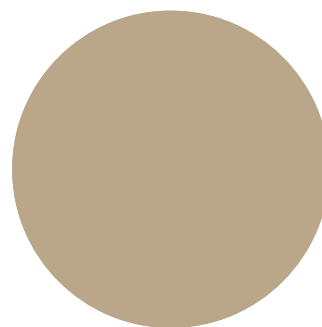


F3-09-65-WP

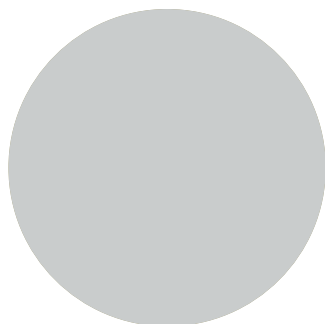


T5-03-76-WP

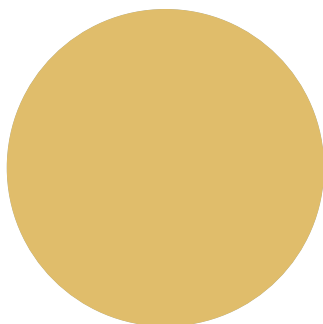


F2-40-60-WP

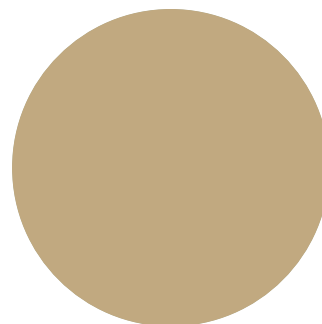


F2-14-66-WP

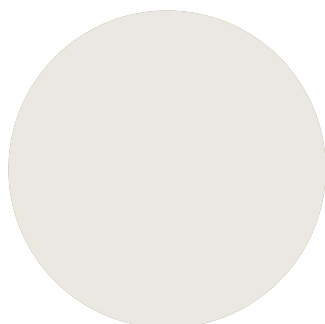


HO-01-86-WP

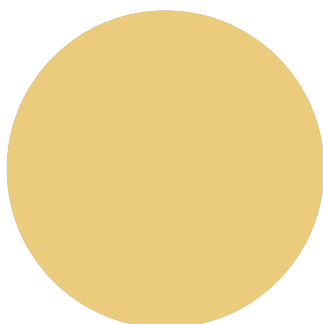


F3-24-75-WP

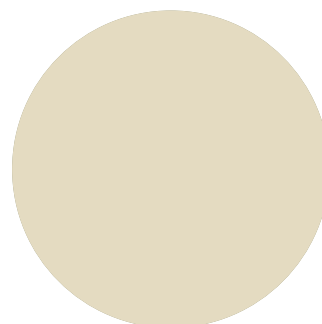


F8-07-83-WP

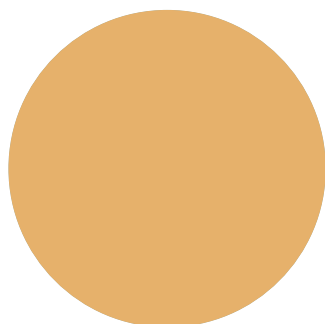


E2-43-57-WP

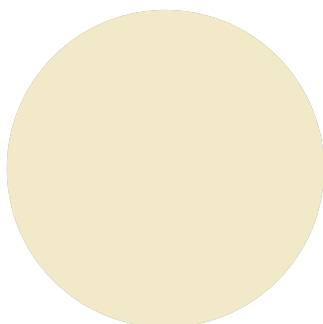


G4-13-85-WP

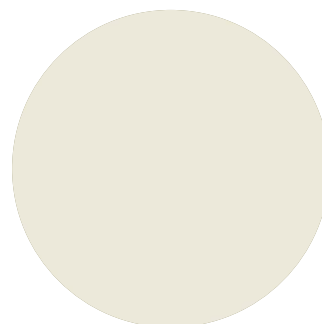


F9-04-83-WP

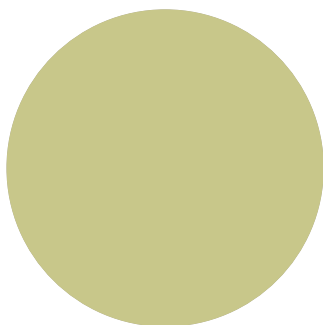


H1-20-70-WP

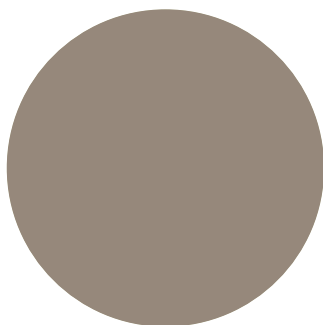


D6-10-30-WP

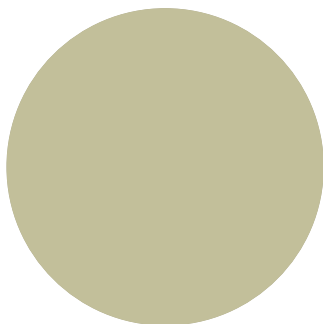


H1-11-70-WP

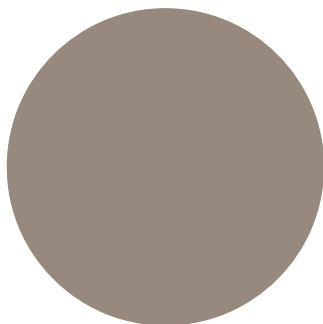


D2-10-30-WP

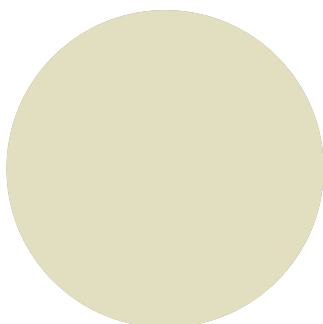

HO-09-80-WP

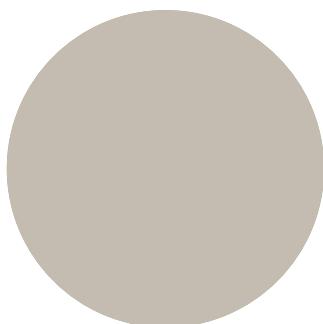

EN-02-71-WP

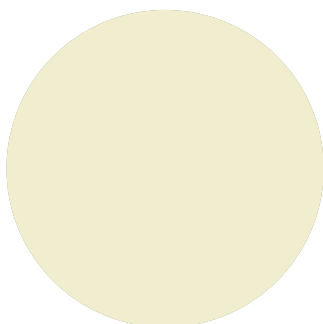

H1-11-86-WP

Order yours at
healthbasedbuilding.com

Disclaimers: Colours shown are as close as possible to actual paint colours. Please note, due to limitations of the printing process, photographic and printed images may not represent the true colour. Always confirm your colour choice with Foreverbreathe™ test pots.